


SHEDS WINDOW ASSEMBLY & INSTALLATION

FOR ALL SHEDS MANUFACTURED BY OLDFIELD-TRECO.

NOTE: Window installation may be done at any time but is best done before installing the wall panel where the window is to be located.

WINDOW ASSEMBLY

1. Insert 2 corner angles into one end of each long frame section. The corner angles are designed to hold the entire frame work together without adhesive, but household glue may be applied to the corner angles if a firmer joint is desired.
2. Join one short frame section to one long frame section.
3. Join the other long frame section.
4. Remove the protective coating on the 2 perspex sheets and slide one into each track in the framing sections.
5. Insert the 2 remaining corner angles into each end of the remaining short frame section.
6. Tap the short frame section into position to complete the window assembly.

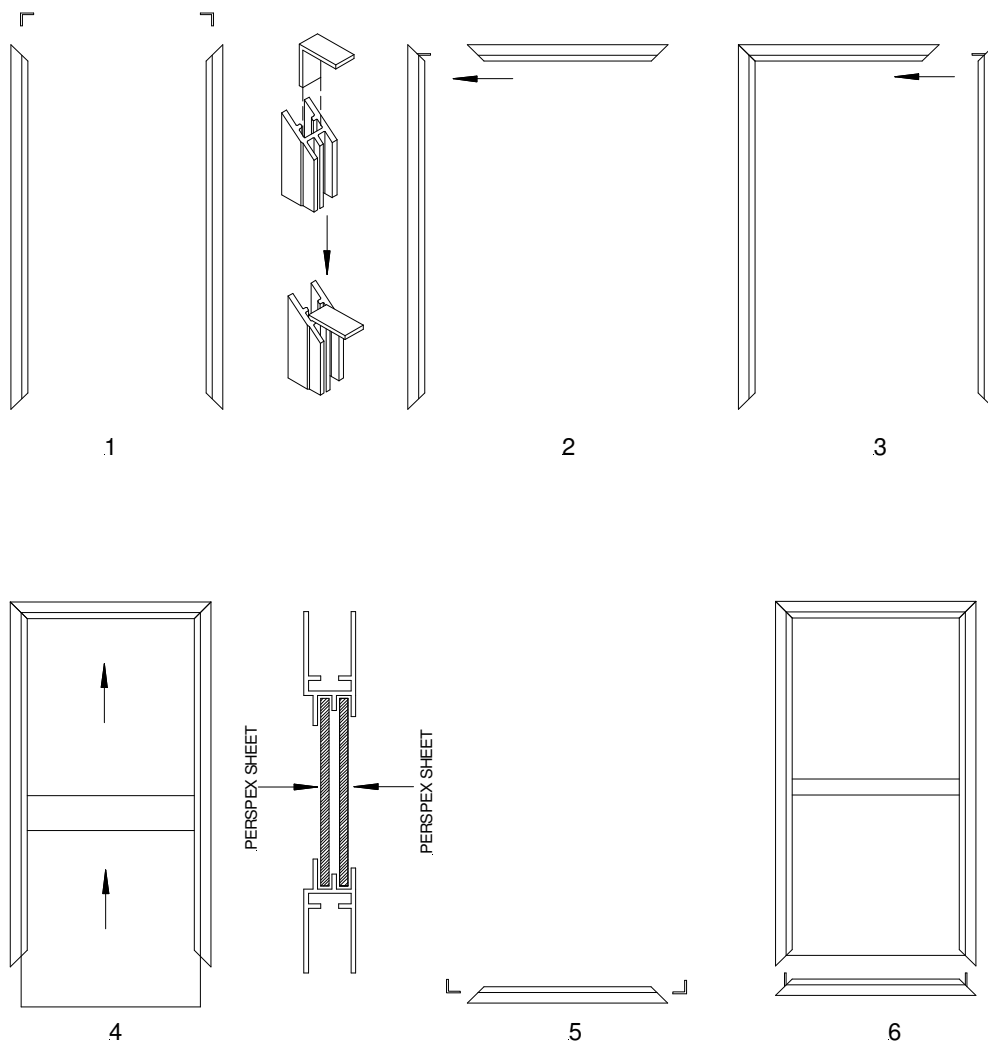

W300-27/10/09

TRWE

WINDOW INSTALLATION.

1. Cut 330mm (13 inches) off the top of one wall panel .
 2. Install the shortened wall panel ensuring that it is over-lapped on its side ribs by the adjoining panels.
Screws may have to be loosened or removed from adjoining panels and re-tightened when the window is in position.
 3. Slide the window into position from the top, ensure that the plain face of the window frame faces outside so that rain water drains outside the shed. Taking care not to over-bend any panels.
- Return to Owner's Instruction Manual to complete shed assembly.

